

# TW 300




**Waterfilling**  
optional

**on/off key**

**Draining off**  
optional

**Timer / Automatic basket lift**  
optional

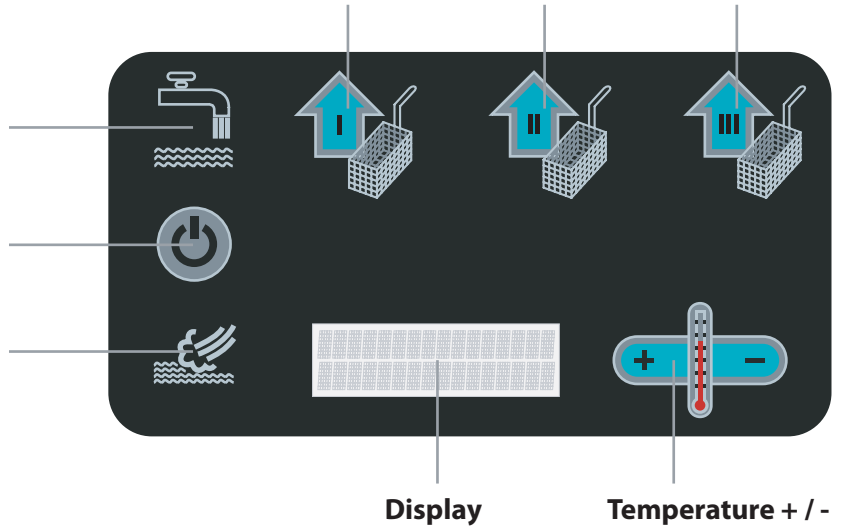


### Equipment on/off



- Press on/off key pad
- > Display: Temperature needed
- > Signal indicates when temp is not reached



### Watertemperature needed

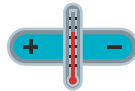

- Temp key press +/- simultaneous



### Timer function (without automatic basket lift)



- Press timer I / II / III
- Signal appears when time expiry
- > Reset timer



Timer I / 15 Sec. – II / 25 Sec. – III / 7 Min.

### Changing timer (without automatic basket lift)



10 Sec.

- Press timer I / II / III 10 Sec.
- Changing timer press +/-
- Press I / II / III again for memory function



### Standbyfunction

- > If Equipment is not in use for at least 45 min. Temp returns automatically to 50 Degree



### For options flip side

# TW 300

## Operating Optionen



### Automatic basket lift

- Press basket lift key I / II / III
- > Basket will lower itself
- > Basket will lift itself when time is reached



10 Sec.

### Automatic basket lift - changing timer

- Press basket lift key I / II / III 10 sec.
- Changing timer press +/-
- Press I / II / III again for memory function



### Filling of Water

- Press Waterfill key
- > Filling takes 3 min.
- > pre programmed time  
(Press again - stop Water filling)



10 Sec.

### Waterfill - change time/quantity

- Press Waterfill key 10 sec.
- > Filling starts
- > If quantity is reached press key again  
(Water filling time has memory function)



### Electric washing away with inlet / outlet

- Press wash away key
- > on / off rhythm wash away procedes
- > press again wash away function key off



10 Sec.

### Change Electric washing away mode

- Press wash away key 10 sec.
- Change intensity with +/-
- (very weak, weak, middle, strong, very strong)
- For memory press key wash away again

